 


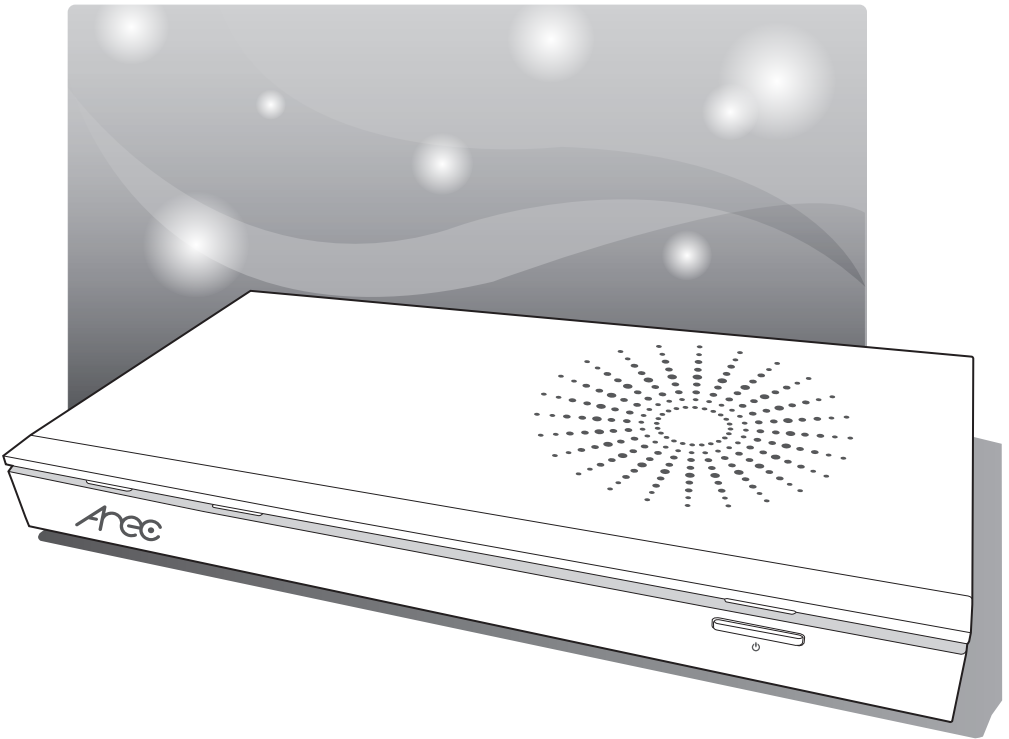

DS-4CU

Speaker Tracking Station

Quick Installation Guide | ENGLISH





FCC

Federal Communication Commission interference statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: -Reorient or relocate the receiving antenna. -Increase the separation between the equipment and receiver. -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. -Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Warning

The equipment complies with RF exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference and
- (2) this device must accept any interference received, including interference that may cause undesired operation

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

Notice: Any changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.



CE

Hereby, AREC Inc., declares that this Media Station is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

CB

CB

CAUTION

Danger of explosion if battery is incorrectly replaced.

Replace only with the same or equivalent type.

- the ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.:
- no naked flame sources, such as lighted candles, should be placed on the apparatus;
- attention should be drawn to the environmental aspects of battery disposal;
- the use of apparatus in tropical climates.

the instructions for use shall state that the apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.





Introduction

Compatible with recommended Conference Microphone System and AREC PTZ Cameras, AREC DS-4CU Speaker Tracking Station enables all of the meeting participants can see the close-up view of the active speaker and a custom graphic together on the local screen clearly. Working with AREC Media Station, all the meeting and discussing content can be recorded completely with auto tracking and auto switching features. The architecture of AREC Speaker Tracking System is simple and can be installed quickly, providing more effective meetings and enhancing user experience.

Specifications

Product Name	Speaker Tracking Station
Model Name	DS-4CU
Dimension	354mm(L) x 188.2mm(W) x 46mm(H)
Weight	1324g
Power Requirement	12V/2A
Power Consumption (Max.)	24W (Max.)
Operating Temperature / Humidity	0°C ~ 40°C / 90%
Maximum normal load description	Insert 3 IP CAM to LAN port and insert 1 video signal (either HDMI or VGA input). And output the transcoded video to both HDMI and VGA port.

   Package Contents

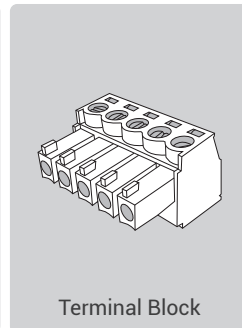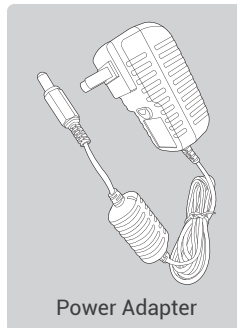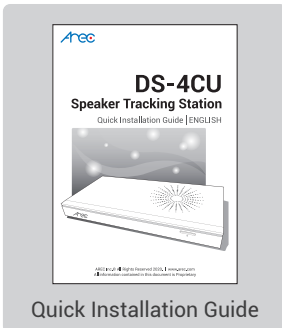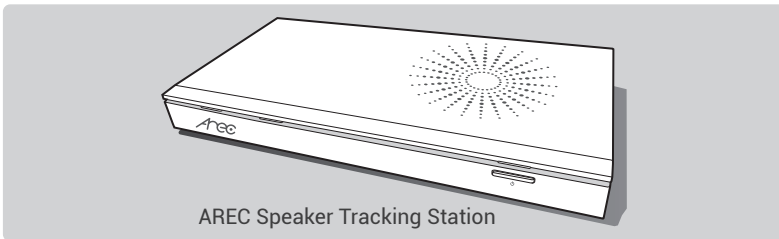


Product Appearance

■ Front Panel




  ■ Rear Panel

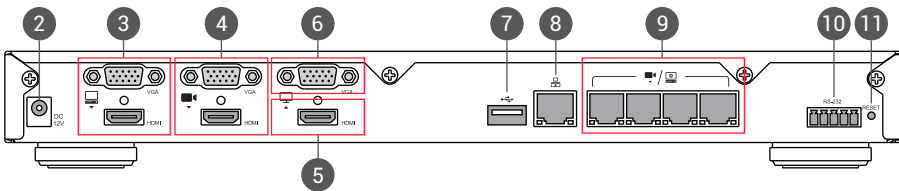


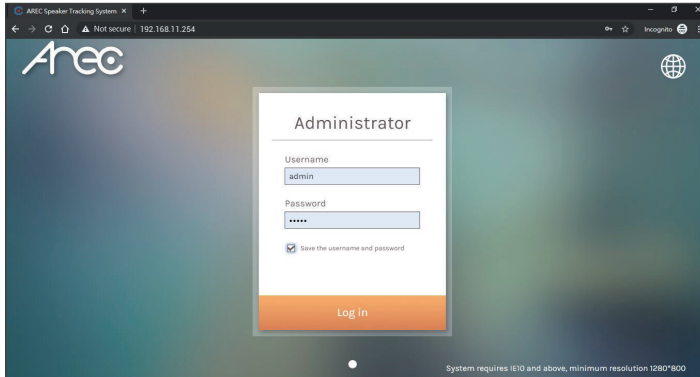 
NO.	Name	Brief introduction
1	Power	Power on/off the device
2	Power port	12V/ 2A
3	Video input	VGA/ HDMI input source for PC []
4	Video input	VGA/ HDMI input source for camera []
5	Video output	Monitor input sources
6	Video output	Preview with On-screen menu
7	Back USB port	1. Control external devices via USB to RS-232 converter 2. Connect the mouse to control the menu 3. Connect to AREC S1
8	Network port	RJ-45 Ethernet connector for network connection
9	Network camera input or device setting	1. RJ-45 Ethernet connector for network camera input source 2. RJ-45 Ethernet connector for device configuration and control
10	RS-232	Captive screw connector for control over RS-232
11	Reset button	Restoring devices to its factory default state

Connection

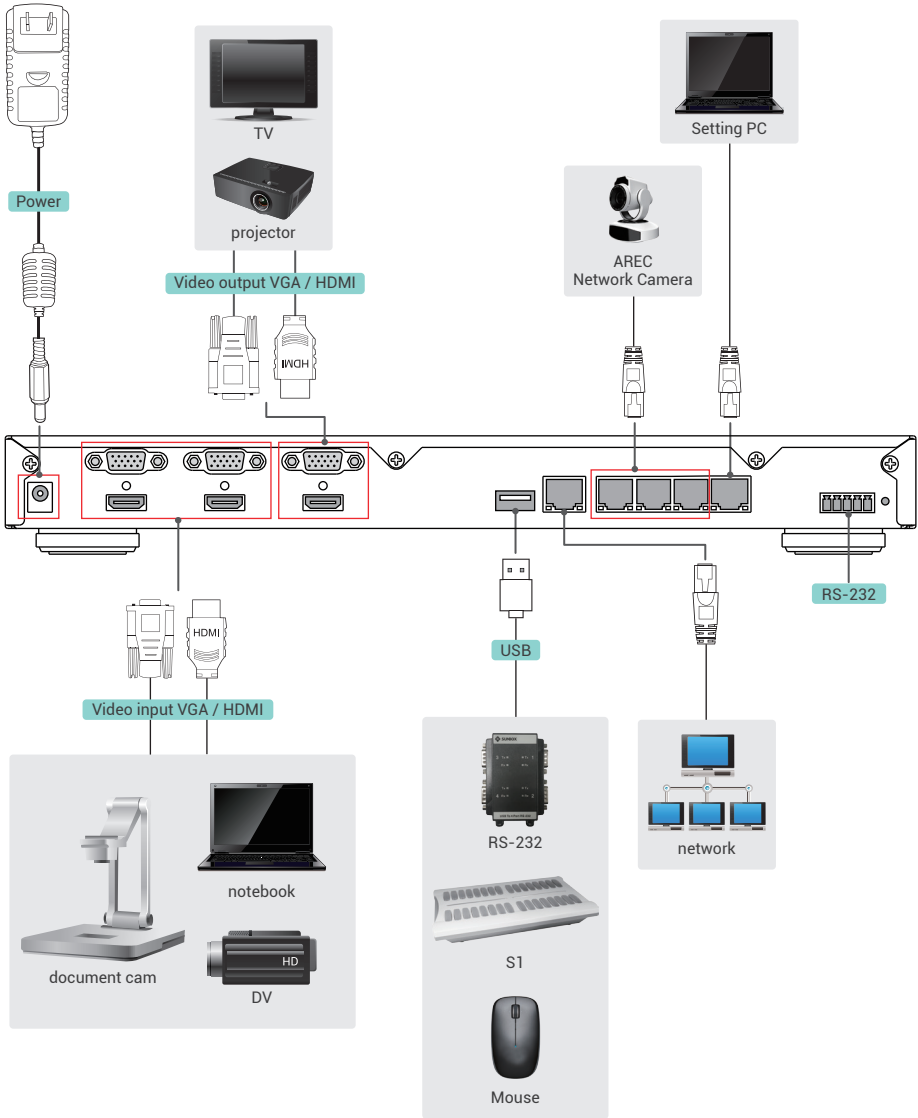



 
Accessing the Administrator pages

Connect PC to the setting port of Media Station with standard network cable. Open up the browser, and input 192.168.11.254 in the browser page. Log in Administrator  with default username admin and password admin, then entering System Administration webpages.




Setup

Step 1: Set up video input name, video source, PTZ control in [[Video inputs](#)] of [[Media I/O](#)]. The Capture source can be the video port [] and [] with option VGA or HDMI. If only one of the latter is connected, the system would detect and automatically switch to source of signal. If both options are connected, set the capture priority between those.

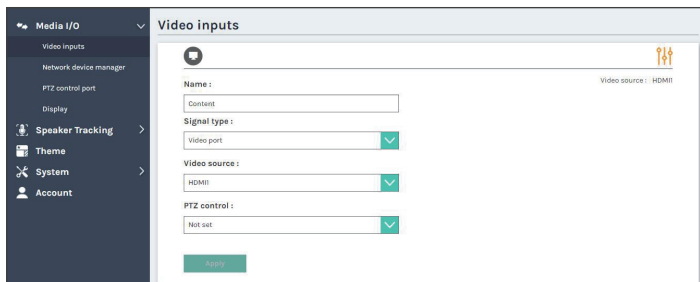

 If the desired video source is network camera, a login authentication with the camera is required firstly in the [[Network device manager](#)] setup tab of [[Media I/O](#)].

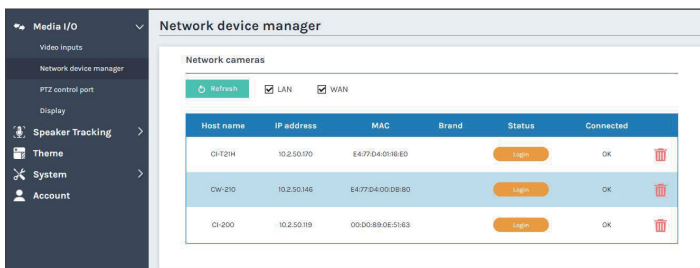

The system automatically scans and lists the network cameras connected to the Media Station once entering the [[Network device manager](#)] page. You may click Refresh button to scan again. Click Login button and the login authentication dialog pop out. Enter the username and password of the camera to complete the authentication and change the status to [[OK](#)]. Then the camera is ready for video input selection. Select the desired camera by its IP address. For video source of encoder, enter RTSP or RTP connection URL.

2

Name :
Cam 2

Signal type :
Encoder

Protocol :
RTSP

Primary URL :
192.168.11.202/h264

Secondary URL :

PTZ control :
Not set

[Apply](#)

Step 2: Set up the camera's automatic tracking in [[Speaker Tracking \ Camera control](#)] page.

- Media I/O >
- Speaker Tracking >
- Control settings
- Camera control
- External device control
- Theme
- System >
- Account

Camera control

+ Add

Group ID	Video inputs (Preset)	Overlay	Layout	Background	Ext. Recorder Theme				
0	1	Content(1)	1	1	0	2			
0	2	Content(2)	2	1	0	2			
0	3	Content(3)	3	1	0	2			
0	4	Content(4)	4	1	0	2			

Step 3: Set up date and time of host machine in [[System settings](#)] of [[System](#)].

- Media I/O >
- Speaker Tracking >
- Theme
- System >
- System settings
- Network
- Firmware
- Configuration
- Account

System settings

Device identification

Hostname : Hostname follows RFC-952 internet host table specification.

Device description :

Brand :
AREC Inc.

Model :
DS-4CU

Serial number :

MAC :
84:7E:40:ED:80:46

CAUTION
RISK OF EXPLOSION IF BATTERY IS REPLACED
BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING
TO THE INSTRUCTIONS

Important Security Policy

■ Precautions

1. Please open the product package carefully; we commend you keep this packaging for future transport, storage or maintenance use.
2. There are no switches or adjustment buttons required for operation inside this product, so for your safety, please do not open the casing on your own, or vigorously rotate, shake or use any other inappropriate ways to operate this product in order to avoid electrical shocks and voiding the warranty. You can contact a local dealer directly if you have any questions.
3. Heat will be generated during the use of this product; therefore there must be sufficient ventilation for the temperature of the unit to remain at a stable status. So please use the product under normal environments to prolong the usage life, and avoid installing it in the following environments.
 - Locations that are unstable or have incomplete planes
 - Locations with powerful magnetic fields
 - Locations where it is damp or may have water leakage
 - Locations that are too hot, close to heaters and air hoses, or be exposed to direct sun light for long periods of time
 - Locations that are dusty
 - Locations where there are possible shocks
 - Locations close to power amplifiers
4. If you notice smoke or odor coming from the product, please quickly remove the power cable and send it to a maintenance center for processing.
5. To avoid electrical shock, the plug of the adapter should be stably and completely inserted into the power outlet and cannot be exposed; it must also have sufficient capacity to withstand the current transmission. Please do not plug the adapter into the power outlet before connecting the cable in order to avoid danger.
6. If not used for long periods of time, please unplug the power plug, and to ensure electrical safety, when unplugging the adapter, please hold the plastic part of the adapter with dry hands and then unplug the adapter. Please properly connect the cables according to the printed instructions on the installation manual and the machine to ensure optimized usage effects.



AREC Inc.© All Rights Reserved 2020. | www.arec.com
All information contained in this document is Proprietary



Made in Taiwan
Date : 2020.1.1
Version : 6.0